TOCON_Si10



v-lambda weighted Si based VIS photodetector with integrated amplifier for lux measurment



Properties of the TOCON_Si10

- v-lambda weighted Si based VIS photodetector in TO5 housing with diffusor
- o... 5 V voltage output
- peak wavelength at 560 nm
- max. illuminance at peak is 80 Mlux, minimum illuminance (resolution limit) is 80 klux
- Applications: stong illuminance measurement

What is a TOCON?

A TOCON is a photodetector with integrated amplifier converting visible light into a voltage. The V_{out} pin of the TOCON can be directly connected to a controller, a voltmeter or any other data analyzing device with voltage input. Modern electronic components and a hermetically sealed metal housing with glass window eliminate noise caused by parasitic paths inside the package and EMI. A TOCON is a perfect solution for each ambient light sensing application starting from stray light detection at mlux level up to sun light measurements at Mlux level. This ten orders of magnitude measurement range is covered by ten different TOCONs that differ by their sensitivity.

NOMENCLATURE

TOCON_	ABC, A, B, C, blue, GaP or Si	1 10
	Spectral response	Irradiance limits (V_{supply} =5 V , $\lambda = \lambda_{max}$)
	ABC = broadband $\lambda_{\text{max}} = 290 \text{ nm} \lambda_{\text{S10\%}} = 227 \text{ nm} \dots 360 \text{ nm}$	1 = 1.8 pW/cm ² 18 nW/cm ²
	A = UVA $\lambda_{\text{max}} = 331 \text{ nm} \lambda_{\text{S10\%}} = 309 \text{ nm } 367 \text{ nm}$	2 = 18 pW/cm ² 180 nW/cm ² 3 = 180 pW/cm ² 1.8 μW/cm ²
	B = UVB $\lambda_{\text{max}} = 280 \text{ nm} \lambda_{\text{S10\%}} = 243 \text{ nm } 303 \text{ nm}$	4 = 1.8 nW/cm ² 18 μW/cm ²
	C = UVC $\lambda_{\text{max}} = 275 \text{ nm} \lambda_{\text{S}_{10\%}} = 225 \text{ nm} \dots 287 \text{ nm}$	5 = 18 nW/cm ² 18ο μW/cm ² 6 = 18ο nW/cm ² 1.8 mW/cm ²
	Blue = blue light $\lambda_{max} = 445 \text{ nm} \lambda_{S10\%} = 390 \text{ nm} \dots 515 \text{ nm}$	7 = 1.8 μW/cm ² 18 mW/cm ²
	GaP = UV + VIS $\lambda_{max} = 445 \text{ nm} \lambda_{S10\%} = 190 \text{ nm} \dots 570 \text{ nm}$	8 = 18 μW/cm ² 180 mW/cm ² 9 = 180 μW/cm ² 1.8 W/cm ²
	Si = VIS $\lambda_{\text{max}} = 560 \text{ nm} \lambda_{\text{S10}\%} = 390 \text{ nm} \dots 800 \text{ nm}$	10 = 80 mlux 80 Mlux
	E = UV-Index spectral response according to ISO 17166	2 = up to UVI 30

BOSTON ELECTRONICS | shop.boselec.com | www.boselec.com | boselec@boselec.com | 617-566-3821

TOCON_S₁10




v-lambda weighted Si based VIS photodetector with integrated amplifier for lux measurment

SPECIFICATIONS

Parameter	Symbol	Value	Unit
Spectral Characteristics			
Typical Responsivity at Peak Wavelength	S_{max}	62	mV/Mlux
Wavelength of max. Spectral Responsivity	λ_{max}	560	nm
Responsivity Range (S=0.1*S _{max})	-	390 800	
General Characteristics (T=25°C, V _{supply} =+5 V)			
Supply Voltage range	V_S	2.5 5	V
Saturation Voltage	V_{Sat}	V _S - 5%	V
Typical dark output voltage at 10 MOhm load	V_{Offset}	700	μV
Temperature Coefficient at Peak	T_c	< +0,16	%/K
Typical Current Consumption	1	150	μΑ
Bandwidth (-3 dB)	В	15	Hz
Risetime (10-90%)	t_{rise}	0.073	S
Maximum Ratings			
Operating Temperature	T_{opt}	−25 +85	°C
Storage Temperature	T_{stor}	-40 +100	°C
Maximum soldering temperature (for 3 seconds)	T_{sold}	300	°C

NORMALIZED SPECTRAL RESPONSIVITY

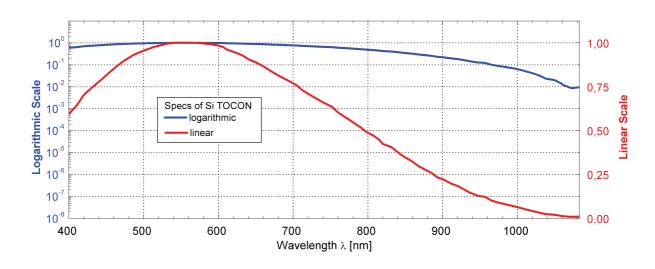


TOCON_Si10



v-lambda weighted Si based VIS photodetector with integrated amplifier for lux measurment

FIELD OF VIEW

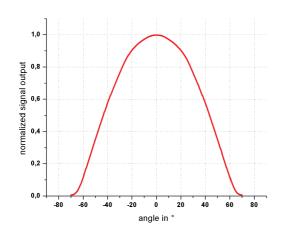



Measurement Setup:

lamp aperture diameter: 10 mm distance lamp aperture to second aperture: 17 mm second aperture diameter: 10 mm distance second aperture to detector: 93 mm

pivot level = top surface of the detector window

DRAWING

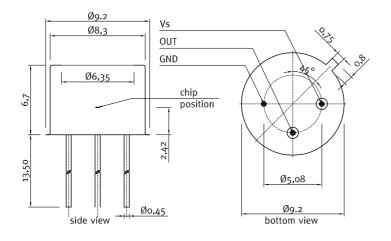

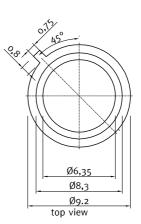

TOCON Si10



v-lambda weighted Si based VIS photodetector with integrated amplifier for lux measurment

APPLICATION NOTE FOR TOCONS

The TOCONs need a supply voltage of $V_{\text{supply}} = 2.5 ... 5V_{DC}$ and can be directly connected to a controller or voltmeter. Please note that the theoretic maximum signal output is always a little less (approx. 5%) than the supply voltage. To learn more about perfect use of the TOCONs please refer to the TOCON FAQ list published at www.sglux.com.

CAUTION! Wrong wiring leads to destruction of the device.

For easy setup of the device please ask for a TOCON starter kit.



Miniature steel housing with M12x1 thread for the TOCON series

- Optional feature for all TOCON detectors
- Robust stainless steel M12x1 thread body, length 32 mm
- Integrated sensor connector (Binder 4-Pin plug) with 2m connector cable
- Easy to mount and to connect



Miniature PTFE housing with M12x1 thread for the TOCON series

- Optional feature for all TOCON detectors without concentrator lens
- Teflon (PTFE) M12x1 thread body, length 31 mm
- Wide field of view, dirt-repellant, water proof at wet side (IP 68)
- Integrated sensor connector (Binder 4-Pin plug) with 2m connector cable
- Easy to mount and connect, cleanable

The PTFE housing reduces the signal output by approx. 95%. Please consider this while selecting the TOCON's sensitivity range.



Plastic probes

- Optional feature for all TOCON detectors
- probes in small plastic housings with a TOCON inside
- Customized housings available
- Easy to mount and to connect
- Integrated sensor connector (Binder 4-Pin plug)
- Cable available



Water pressure proof TOCON housing

- Optional feature for all TOCON detectors without concentrator lens
- G1/4" thread, 10 bar water pressure proof
- Customized housings available
- Easy to mount and to connect
- Integrated sensor connector (Binder 5-Pin plug)
- Cable available